



Upgrade to the industry's most advanced Motor Program: **AMP™ Motorization** features 2-way technology with superior value and innovation paired with a smart, seamless user interface.



RF 2W 15 Channel Remote Control Programming Guide

Specifications

- Up to 15 channels with 3V (CR2450) battery, magnetic holder included
- Channel 0 controls all shades assigned to remote; ability to hide extra channels
- Favorite position activated by quick touch of a button
- Locking feature prevent unwanted configuration changes



AMP™ Motorization Table of Contents

| | |
|---------------------------------|----|
| Declarations | 3 |
| Safety Instructions | 4 |
| AMP™ Remote Overview | 5 |
| AMP™ Remote Functions | 6 |
| P1 Button Instructions | 7 |
| Initial Set-up | 8 |
| Adjust Limits | 9 |
| Favorite Position | 10 |
| Add or Remove Additional Remote | 11 |
| Adjust Motor Speed | 12 |
| Roller or Sheer Mode | 13 |
| Quick Index | 14 |
| Troubleshooting | 14 |



Please scan QR code to watch videos
for product programming



Declarations

U.S. Radio Frequency FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Coin Battery Warning

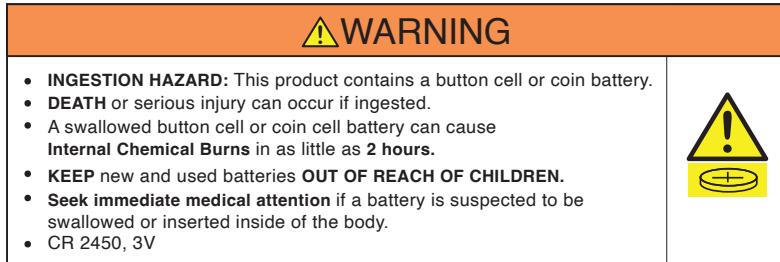

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- CR2450 is the compatible battery type.
- The nominal battery voltage is 3.0V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 50°C / 122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.


Safety Instructions

Attention

Never drop, knock, drill or submerge the motor. Keep the power cable in the proper position as shown below.

Read all safety instructions before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.

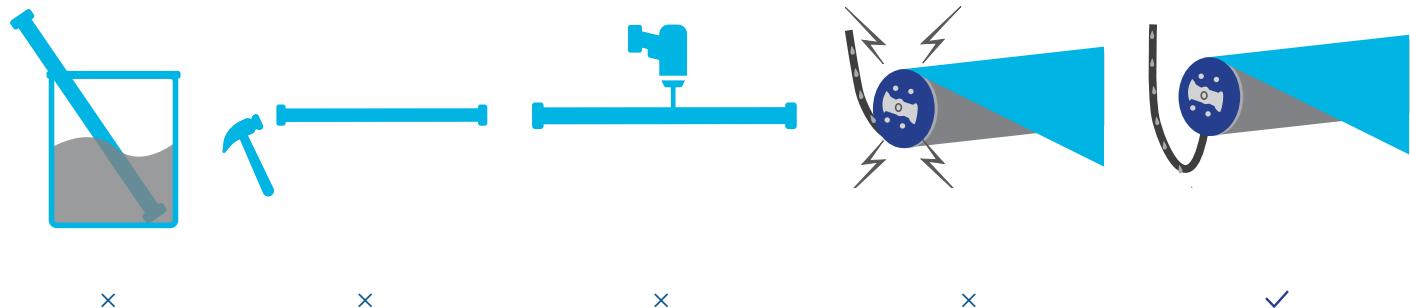

Important Safety Instructions


1. Do not expose motor to humid, damp, or extreme temperature conditions.
2. Do not drill into motor.
3. Do not cut the antenna. Keep it clear from metal objects.
4. Do not allow children to play with this device.
5. If the power cable or connector is damaged, do not use.
6. Ensure the correct crown and drive adaptor are used.
7. Ensure the power cable and aerial is clear and protected from moving parts.
8. Cable routed through walls should be properly isolated.
9. Motor is to be mounted in horizontal position only.
10. Before installation, remove unnecessary cords and disable equipment not needed for powered operation.
11. Installation and programming should be performed by a qualified professional. Use or modification outside the scope of these instructions may void warranty.



Do not dispose of in general waste.
Please recycle batteries and damaged electrical products appropriately.

AMP™ Remote Overview


1. Fields of Application

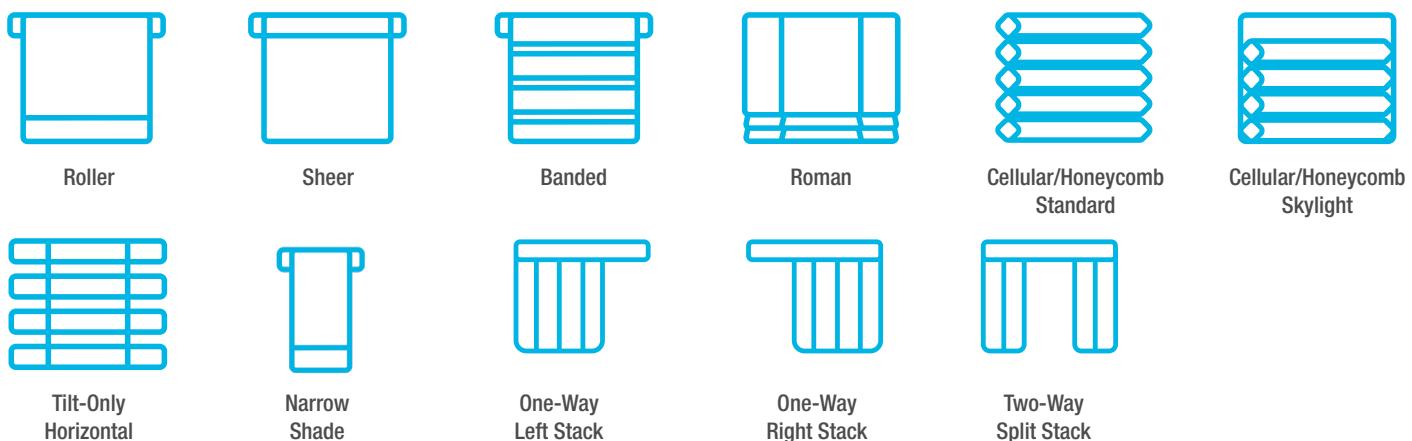

2. Specification

| | |
|------------------------------|-------------------------------|
| Voltage | 3V (CR2450) |
| Radio Frequency | 433.92 MHz Bi-directional |
| Transmitting Power | 10 milliwatt |
| Operating Temperature | 14°F to 122°F (-10°C to 50°C) |
| RF Modulation | FSK |
| Lock Function | Yes |
| IP Rating | IP20 |
| Transmission Distance | up to 200m (outdoor) |


3. Remote Button Instructions

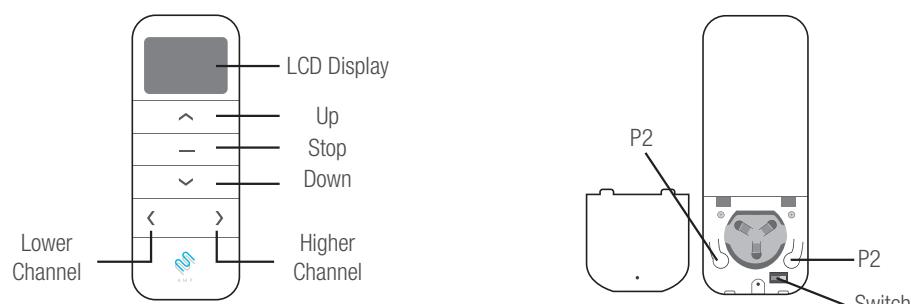

*For AMP™ Drapery, press "Up" for open; press "Down" for close.

4. Replace/Install CR2450 Battery

- Gently insert the included ejector tool into the small pinhole opening and apply a small amount of pressure to the cover and slide the cover off.
- Install battery (CR2450) with positive (+) side facing up.
- Gently slide the cover back on until a "click" sound is heard.

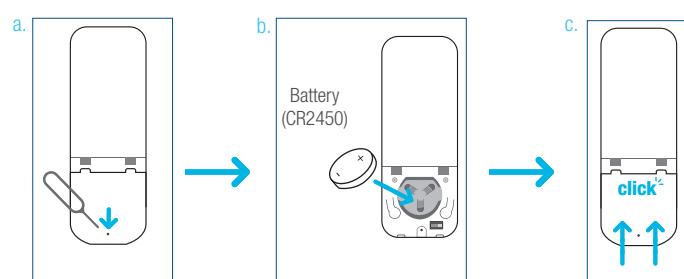

AMP™ Remote Function


1. Channel Options

Select A Channel

- a. Press “<” button on the remote to select a lower channel.
- b. Press “>” button on the remote to select a higher channel.

Action on
Remote Control

Remote Response

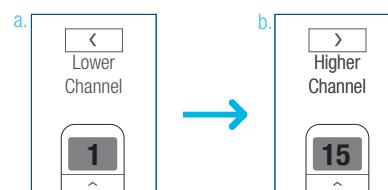


Hide Unused Channels

- a. Press and Hold (about 3 sec) “<” and “>” buttons simultaneously until remote control displays “C” (channel).
- b. Press “<” or “>” button to select required quantity of channel (between 1 to 15).
- c. Press “Stop” button to confirm selection (the example shows a 5-channel selection). The LED will display “o” (OK) once to confirm selection.


Action on
Remote Control

Remote Response

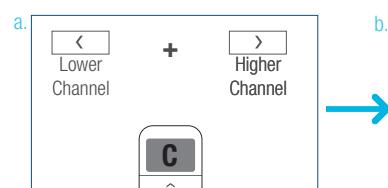




Action on
Remote Control

Remote Response

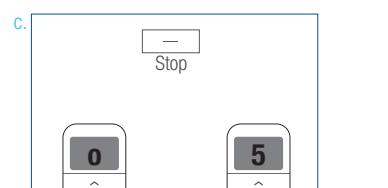

2. Advanced Setting - Disable Limit Setting


- a. Remove the cover from the backside of remote, the lock switch is in the right corner.
- b. Move the switch to the “Lock” position to disable the following commands, remote will show “L” (lock):
 - Change Motor Direction
 - Setting the Upper and Lower Limit
 - Adjust Limit
 - Roller Mode or Sheer Mode
- c. Move the switch to “Unlock” position to assess all remote functions, remote will show “U” (unlock).

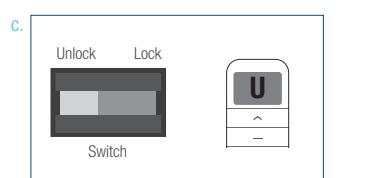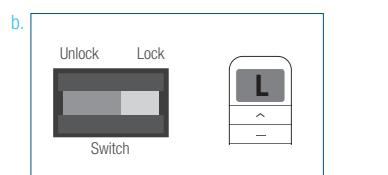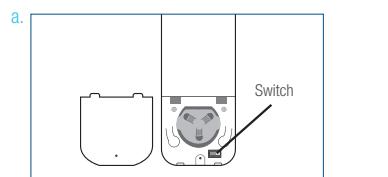


*This advanced feature is intended to be used after all shade programming is completed. User Mode will prevent accidental or unintended changing of limits.

P1 Button Instructions


2. P1 Button Location

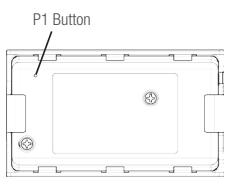


AMPTILT

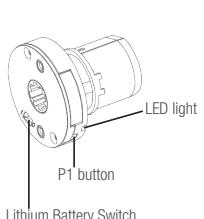


AMP25B / AMP28B / AMP25BDC

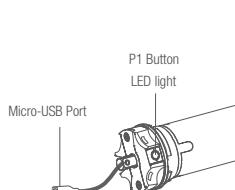

AMP35B

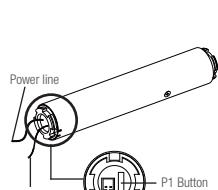

AMPCEL

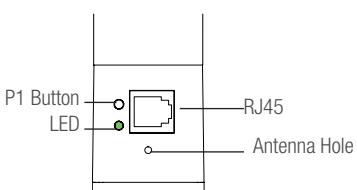

AMP DRAPERY MOTOR

2. P1 Button Instruction

AMPCEL and AMPTILT motors DO NOT BEEP

① Test Motor

Happening as you press for 1 second



Press P1
Less than 1 sec.

when released

Motor Response: Wakes & Runs

② Activate Pairing Mode

Happening as you press for 2 seconds



Press P1
Approx. 2 sec.

Until Shade: Jog x1

when released

Motor Response: Beep x1

③ Sleep Mode

Happening as you press for 6 seconds



Press P1
Approx. 6 sec.

Until Shade: Jog x2

when released

Motor Response: Beep x2

④ Reverse Direction

Happening as you press for 10 seconds



Press P1
Approx. 10 sec.

Until Shade: Jog x3

when released

Motor Response: Beep x3

⑤ Reset To Factory Settings

Happening as you press for 14 seconds



Press P1
Approx. 14 sec.

Until Shade: Jog x4

when released

Motor Response: Beep x4


Initial Set-up

1. Pair / Unpair Remote Control

| | |
|---|--|
| <p>a. Press “P1” button (about 2 sec) on the motor head until motor jog x1 and beep x1.</p> <p>b. In the next 10 secs, press and hold “Stop” button on the remote control until motor jog x2 and beep x3.</p> | <p>Action on Motor</p> <p>Motor Response</p> <p>Action on Remote Control</p> <p>Motor Response</p> |
|---|--|

* Repeat the same procedure to unpair remote control.

AMPCEL and AMPTILT motors DO NOT BEEP

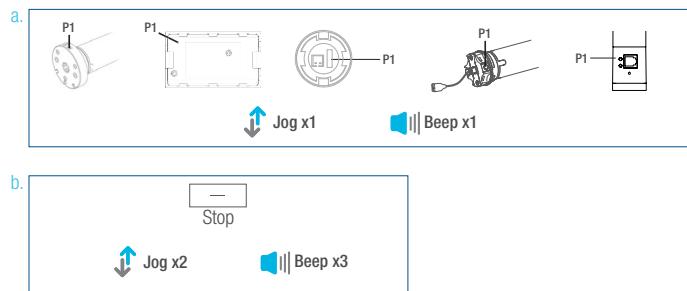

2. Change Motor Direction (if necessary)

Press “Up” or “Down” button to check if the shade moves in the desired direction.

If you need to reverse the direction, press and hold (about 2 sec) “Up” and “Down” buttons simultaneously until motor jog x1 and beep x1.

*The operation is only valid when there are no limits. If the motor has already set the upper and lower limit, then you can only switch direction by pressing P1 button (See P1 button instructions).

Action on Remote Control

Motor Response



3. Setting the Upper and Lower Limits


Set Upper Limit

a. Press “Up” button to raise the shade, then press “Stop” button when it is in the desired upper limit.

b. Press and hold (about 5 sec) “Up” and “Stop” buttons simultaneously until motor jog x2 and beep x3.

Action on Remote Control

Motor Response

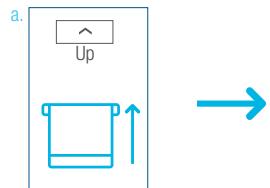


Set Lower Limit

a. Press “Down” button to lower the shade, then press “Stop” button when it is in the desired lower limit.

b. Press and hold (about 5 sec) “Down” and “Stop” buttons simultaneously until motor jog x2 and beep x3.

Action on Remote Control

Motor Response

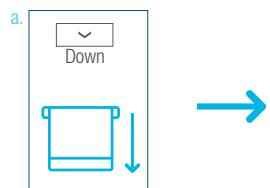

*If you exit the limit setting status before you finish the limit settings, the motor will take the previous existing limits.


Adjust Limits

1. Adjust the Upper Limit

a. Press and hold (about 5 sec) “Up” and “Stop” buttons simultaneously until motor jog x1 and beep x1.

b. Use “Up” button to raise the shade to the desired highest position, and use “Up” or “Down” button to do the final adjustment if necessary.

c. Press and hold (about 5 sec) “Up” and “Stop” buttons simultaneously until motor jog x2 and beep x3.

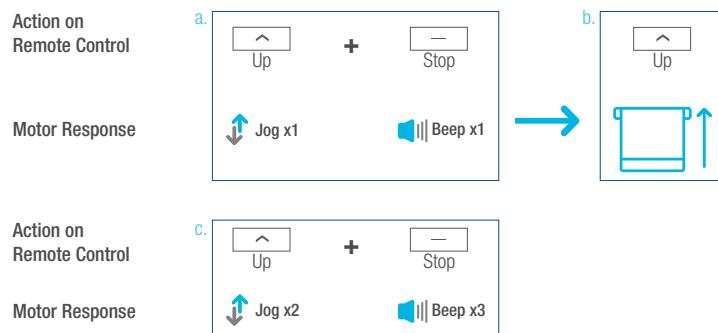


2. Adjust the Lower Limit

a. Press and hold (about 5 sec) “Down” and “Stop” buttons simultaneously until motor jog x1 and beep x1.

b. Use “Down” button to lower the shade to the desired lowest position, and use “Up” or “Down” button to do the final adjustment if necessary.

c. Press and hold (about 5 sec) “Down” and “Stop” buttons simultaneously until motor jog x2 and beep x3.

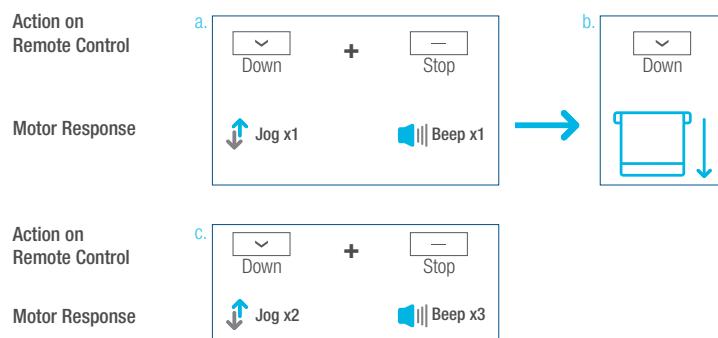

Favorite Position

1. Set Favorite Position



a. Use “Up” or “Down” button to move the shade to desired Favorite position.

b. Press one “P2” button on the back of remote control until motor jog x1 and beep x1.

c. Press “Stop” button until motor jog x1 and beep x1.

d. Once more, press “Stop” button until motor jog x2 and beep x3.

Action on
Remote Control

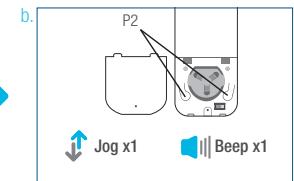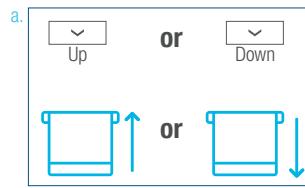

Motor Response

Action on
Remote Control




Motor Response

2. Send Shade to Favorite Position

Press and hold (about 2 sec) “Stop” button, motor will move to Favorite position.

Action on
Remote Control

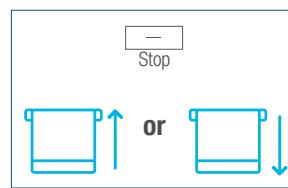

Shade Response


3. Delete Favorite Position

a. Press one “P2” button until motor jog and beep x1.

b. Press “Stop” button until motor jog and beep x1.


c. Once more, press “Stop” button until motor jog x1 and long beep x1.

Action on
Remote Control

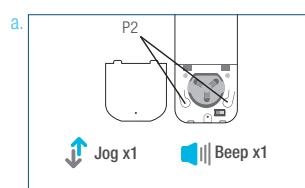

Motor Response

Action on
Remote Control

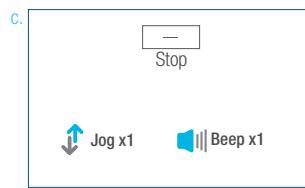

Motor Response

Add or Remove Additional Remote

1. Using Current Remote Control

a. On the **current** remote control, press one “P2” button until motor jog x1 and beep x1.



b. Once more, on the **current** remote control, press one “P2” button until motor jog x1 and beep x1.

c. On the **New** remote control, press one “P2” button until motor jog x2 and beep x3.

*Repeat the same procedure to remove additional remote control.


Action on
Remote Control

Motor Response

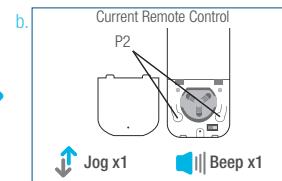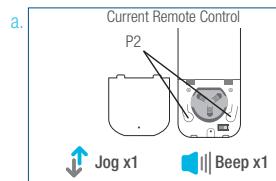

Action on
Remote Control

Motor Response

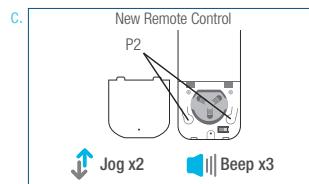

2. New Remote Control



Follow instructions on page 8 under the section **Pair / Unpair Remote Control**

Adjust Motor Speed


1. Acceleration Speed

- a. Press one “P2” button until motor jog x1 and beep x1.
- b. Press “Up” button until motor jog x1 and beep x1.
- c. Once more, press “Up” button until motor jog x2 and beep x1.

Action on
Remote Control

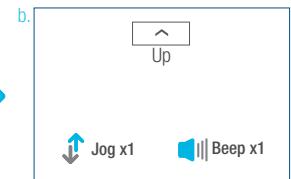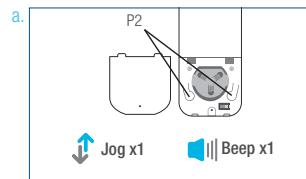

Motor Response

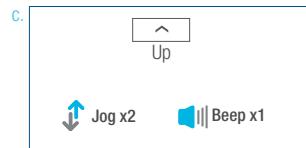



Action on
Remote Control

Motor Response


2. Deceleration Speed

- a. Press one “P2” button until motor jog x1 and beep x1.
- b. Press “Down” button until motor jog x1 and beep x1.
- c. Once more, press “Down” button until motor jog x2 and beep x1.

Action on
Remote Control

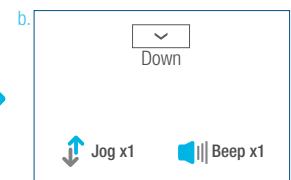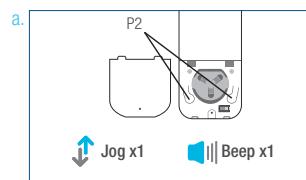

Motor Response

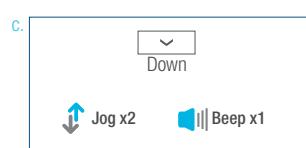

Action on
Remote Control

Motor Response

*If the motor has no response, it already has a Maximum or Minimum speed.

Roller or Sheer Mode

1. Roller Shade Mode - continue movement after a short press - Default Mode

a. Press and hold (about 5 sec) “Up” and “Down” buttons simultaneously until motor jog x1.

Action on Remote Control

Motor Response



b. Press and hold (about 2 sec) “Stop” button until motor jog x2 and beep x3.

Action on Remote Control

Motor Response



2. Sheer Shade Mode - jog movement after a short press (continue movement after a long press)

a. Press and hold (about 5 sec) “Up” and “Down” buttons simultaneously until motor jog x1.

Action on Remote Control


Motor Response



b. Press and hold (about 2 sec) “Stop” button until motor jog x1 and beep x1.

Action on Remote Control

Motor Response

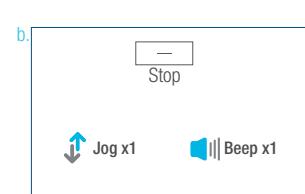

Quick Index

| Settings | Steps |
|------------------------------------|--|
| 1 Pairing | P1 (hold down for 2s) > Stop (hold down for 2s) |
| 2 Switch Rotating Direction | Up + Down (hold down for 2s) |
| 3 Setting Upper & Lower Limits | Upper Limit: Up (hold down for 2s) > Up + Stop (hold down for 2s) Lower Limit: Down (hold down for 2s) > Down + Stop (hold down for 2s) |
| 4 Add / Remove Favorite Position | P2 > Stop > Stop |
| 5 Roller Mode & Sheer Mode Switch | Up + Down (hold down for 5s) > Stop |
| 6 Adjust Limits | Upper Limit: Up + Stop (hold down for 5s) > Up or Down > Up + Stop (hold down for 2s) Lower Limit: Down + Stop (hold down for 5s) > Up or Down > Down + Stop (hold down for 2s) |
| 7 Pair / Unpair Additional Emitter | P2 (existing) > P2 (existing) > P2 (new) |
| 8 Speed Regulation | Acceleration: P2 > Up > Up Deceleration: P2 > Down > Down |

Troubleshooting

| Issues | Possible Causes | Solution |
|---|---|---|
| The motor has no response | Battery in motor is depleted | Recharge with compatible AC adaptor and check connection and positioning of solar PV panel |
| | Insufficient charging from Solar PV Panel | Check connection and orientation of solar PV panel |
| | Remote control battery is discharged | Replace battery |
| | Battery is inserted incorrectly into remote control | Check battery polarity |
| | Radio interference / shielding | Ensure remote control and the antenna on the motor are positioned away from metal objects |
| | Receiver distance is too far from Remote Control | Move remote control to a closer position |
| | Power failure | Check power supply to motor is connected and active |
| | Incorrect wiring | Check that wiring is connected correctly (refer to motor installation instructions) |
| Motor beeps 10 times when in use | Battery voltage is low / PV (solar panel issue) | Recharge with AC adapter or check connection and positioning of solar PV panel |
| Cannot program a single motor (multiple motors respond) | Multiple motors are paired to the same channel. | Always reserve an individual channel for programming functions |
| | | SYSTEM BEST PRACTICE - Provide an extra 15 channel remote in your multi-motor projects that provides individual control for each motor for programming purposes |
| | | Place all other motors into sleep mode (ref to P1 button instructions) |

Turnils Contact Information

Turnils North America

1750 Satellite Blvd, Suite 100
Buford, GA 30518
1-800-341-3600
Amp@Turnils.com

Turnils Canada

2908 Portland Drive
Oakville, Ontario L6H 5W8
1-800-341-3600
Amp@Turnils.com